

# Kanrep Norris


## INSTALLATION INSTRUCTIONS

R5599



Kanrep Norris Plumbing Dist.  
Hamilton, Ontario, Canada 1-800-793-2793  
[Info@kanrep.ca](mailto:Info@kanrep.ca)

# Specifications

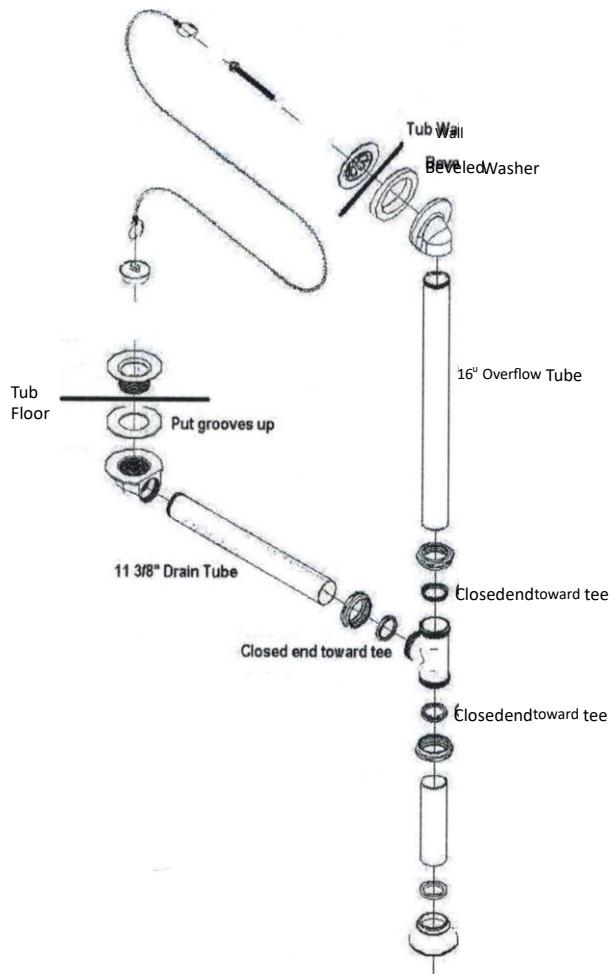

## Waste & Overflow Drain Assembly with Chain & Stopper

Warranted only if installed by a qualified licensed plumber. Use Teflon tape on all threaded connections.

1. Assemble parts as shown before installing to get the accurate length needed for the overflow and drain tubes.
2. The rough-in for the drain hole on the floor is a plumb line from the center of the roll rim on the tub to the floor.
3. Rough-in 1 h" male IPS with h" above the finished floor.
4. All tubing is 1" O.D.
5. At the floor connection, use the enclosed square cut washer or the 1 " washer with closed end toward connection.